



MADE FOR BUILDING
BUILT FOR LIVING

MOISTURE MANAGEMENT GUIDE



IMPRINT

Version: Moisture Management Guide, 11/2025

Publisher and responsible for content: © KLH Massivholz GmbH

KLH® and the KLH®-logo are internationally registered trademark rights of KLH Massivholz GmbH.
The fact that a mark is not included in the list and/or not indicated as registered trademark (brand)
in a text, cannot be interpreted that way that this mark is not a registered trademark (brand)
and/or that this mark could be used without prior written acceptance of KLH Massivholz GmbH.

CONTENT

01	INTRODUCTION	02
02	MOISTURE MANAGEMENT	03
03	TRANSPORT AND STORAGE	04
04	PROTECTION DURING THE CONSTRUCTION PHASE	07
05	WATERPROOFING AND MONITORING	12
06	RISKS OF MOISTURE INGRESS	13
07	MEASURES IN THE EVENT OF MOISTURE INGRESS	14
08	ADDITIONAL LITERATURE AND RESOURCES	15
09	IMAGE REFERENCES	16

INTRODUCTION

01 INTRODUCTION

Water is the number one cause of damage to buildings. Good moisture management not only significantly extends the service life of a building, it is also an important factor for building insurance coverage.

Note:

Bear in mind, wood reacts quickly to moisture, damage depends on reaction (time).

There needs to be some sort of concept for moisture management during the construction phase. This should contain on-site handling, time scheduling and taking protection measures.

For critical areas concerning the building design, there is technical literature containing details and basic design principles (see building physics, flat roof, plinth, wet rooms, etc.).

TOP PRIORITIES

- No standing water (plinth area, ceilings, roofs, balconies and terraces)
- No excessive moisture in installed materials
- Recognisable drainage in the event of water ingress
- Maintainable/checkable wearing parts (drains, joints, connections, etc.)
- Correct building physics design of components (diffusion and convection)

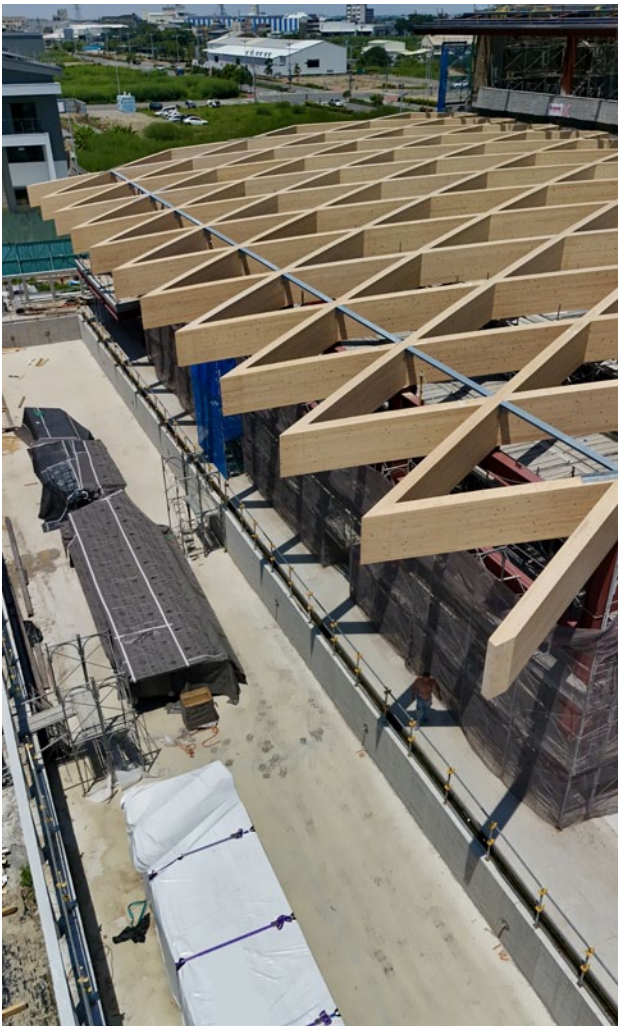


Figure 1. KLH packages waiting for installation



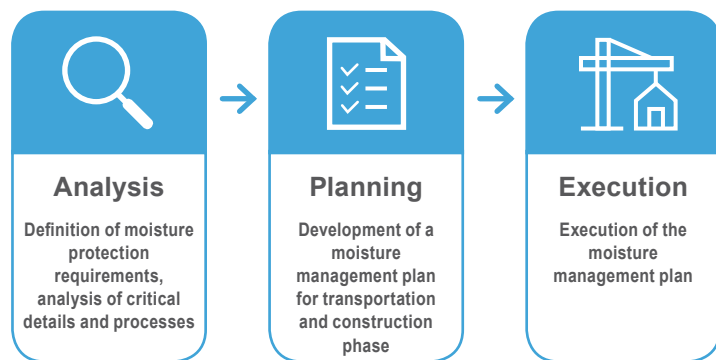
Figure 2. Floor panel lifting

MOISTURE MANAGEMENT

02 MOISTURE MANAGEMENT

Moisture management should be part of the construction site concept, the schedule for building sections and change between trades.

It is crucial to assess which requirements have the most impact on your construction site and plan accordingly.



This should include, but is not limited to:

- **Transportation**
Give information to prepare panel handling, storage and a timetable
- **Storage**
Suitable storage areas and tarpaulins are needed
- **Protection during construction**
How and which components need protection (e.g. visible surface)
- **Temporary drainage system**
- **Critical details**
Especially horizontal panels and end grain parts
- **Timing for wood moisture measurement**
(e.g. after weather events and before next trade begins)
- **Management in case of water ingress**
(preventing long-term damage and possible repairs for visual quality)

Also bear in mind that:

It must be clear who will keep track of the water management and check if the execution is according to plan.

The additional costs need to be considered in the construction site costs.

Construction site processes do not always follow the schedule; weather conditions can change quickly and vary depending on the region and time of the year.

It is always better to be prepared and act quickly. Swift reaction is the most important thing to prevent costly repairs.

TRANSPORT AND STORAGE

03 TRANSPORT AND STORAGE

To ensure trouble-free transportation, the first step should be to check the KLH transportation conditions and/or contact technical support.

TRANSPORTATION

By truck



Conditions for transportation by truck

Container delivery



Conditions of transport for container deliveries

This determines the loading type according to element sizes and destination.

Wrapping and protection measures can depend on the means of transportation and the surface quality.

For onward processing after unloading, the type of loading dictates how much effort is required to get the panels installed, to storage or further transportation.

It also influences:

- Lead time
- Possible element size
- Loading sequence
- Lifting possibilities
- Wrapping and packaging options



Figure 3. Open package during loading



Figure 4. Closed package ready for transport



Figure 5. Truck ready for unloading

TRANSPORT AND STORAGE

Ordered wrapping is not the same as the initial wrapping that covers the whole package.

As noted, this depends on the loading conditions and is not always the same. Ordered wrapping needs to be specified upfront and can also be an issue when it comes to border restrictions that require cargo inspection.



Figure 6. Ordered wrapping for smaller packages

Note:

Container transport is carried out in one of three container loading types mentioned below. Wrapping and packaging conditions after container transport are not consistent due to the different loading situations. Cargo inspections and possible treatment sometimes require opening the packages, leaving them in an unfit state for outdoor storage (example BMSB treatment, brown marmorated stink bug).



Figure 7. Package storage on site

There are 3 container loading types available



Figure 8. Horizontal with loading sledge-standard



Figure 9. Vertical single element loading for open top containers



Figures 10a. - 10b. Horizontal with loading sledge-light (stripes mounted on panel)

TRANSPORT AND STORAGE

STORAGE

If elements are stored at the construction site:

- Ensure that the ground is dry and has adequate load-bearing capacity.
- Use timber spacers, align them vertically.
- Secure against toppling.
- Remove packaging to prevent condensation.
- Provide adequate ground clearance and tarpaulins to protect elements from rain, water spray, and rising damp.
- Use additional timber spacers to prevent creeping deformations when in extended storage.

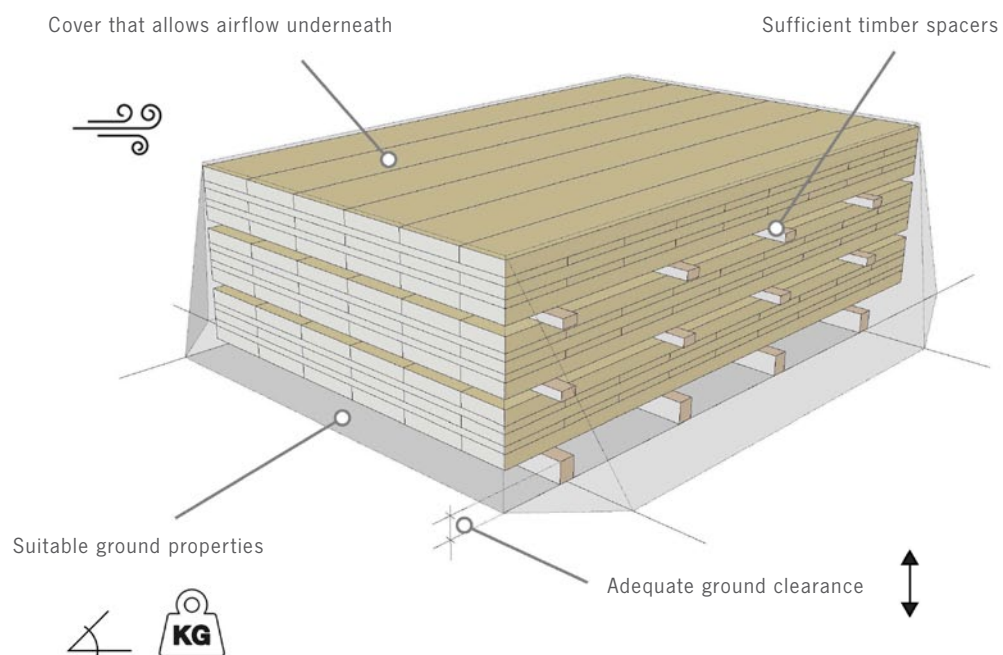


Figure 11. Stack of panels in the loading hall



Figure 12. Discolouration due to direct sunlight (UV)

Common problems after incorrect storage include yellowing and water stains on visible surfaces.



04 PROTECTION DURING THE CONSTRUCTION PHASE

Preventive measures can help to simplify the construction process and offer basic protection against the effects of moisture and soiling on the construction site. However, caution is still required, especially during storage and in the presence of standing water.

KLH offers protective coatings and temporary protective films that can prevent negative weather influences for a certain period of time.

Note:

Only building waterproofing can permanently keep out standing water.

Coatings and temporary protective films have a limited protection period. Please refer to the product data sheets for more detailed information. However, the protective films can be used as a permanent airtight layer (without UV exposure).

Various precautions can be taken to provide protection at the construction site.

Note:

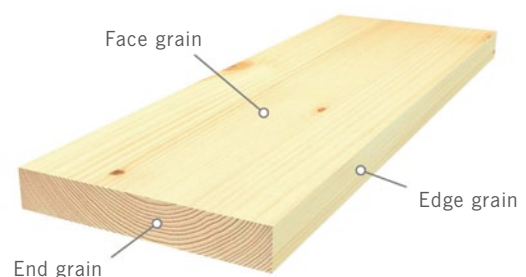
End grain absorbs water the quickest, in contrast to face or edge grain sides which can drain water away relatively quickly when inclined. Horizontal surfaces must always be protected if they are directly exposed to rain (water), as there is always a risk of standing water without a slope.



Figure 13. KLH Protect at construction site



Figure 14. KLH Protect at KLH production facilities



PROTECTION DURING THE CONSTRUCTION PHASE

TEMPORARY ROOF SCAFFOLDING OR HALL

In exceptional cases, the entire building, construction section or floor is covered with a temporary roof, or a temporary hall is erected to produce prefabricated parts and modules.

COVERING THE INDIVIDUAL PARTS

In most cases, the individual parts are covered as required. Visible surfaces must be adequately protected.

Preventive measures can already protect a large part of the surfaces.

Transitions, openings and joints still need to be sealed, and a functioning drainage system established.



Figure 15. Temporary roof scaffolding, Berlin



Figure 16. Protected construction site, Slovenia

A End grain

at the top or side, is quite vulnerable

B Openings

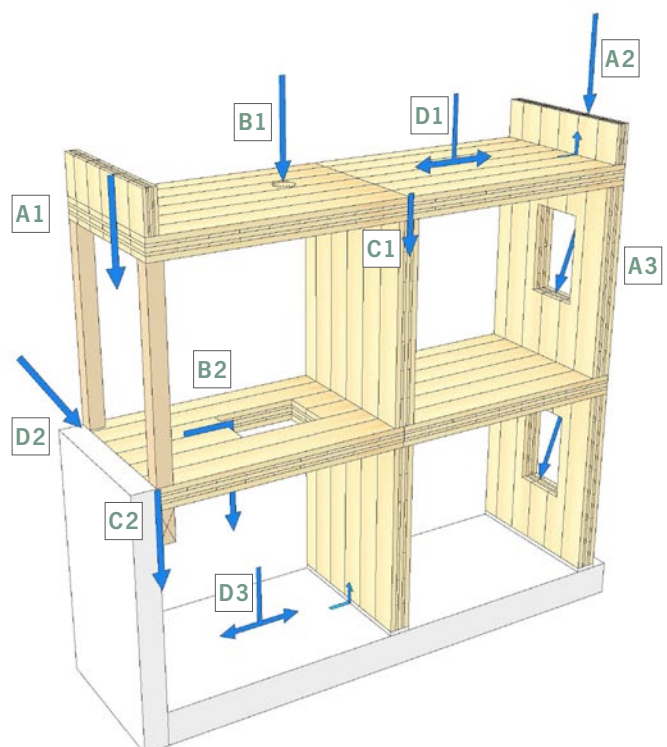
conduct water further and open additional end grain parts

C Joints

between horizontal elements or component connections allow water ingress

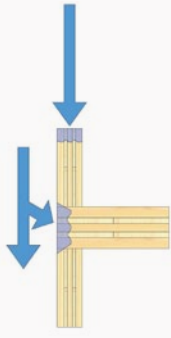
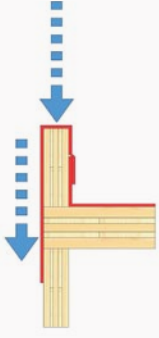
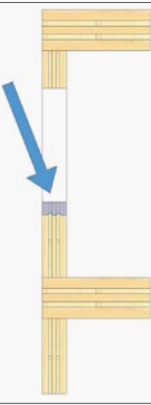
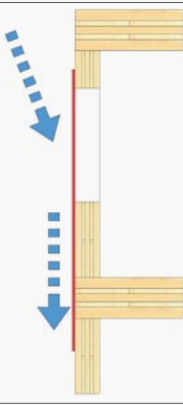
D Horizontal elements

conduct water to the end grain of walls and columns

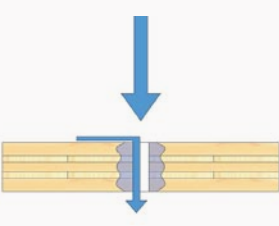
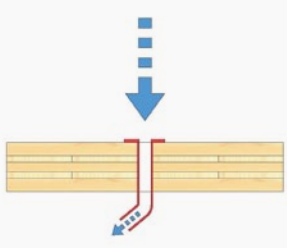
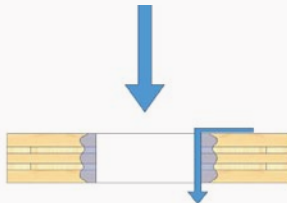
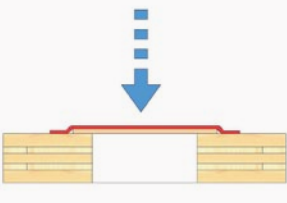


PROTECTION DURING THE CONSTRUCTION PHASE

End grain

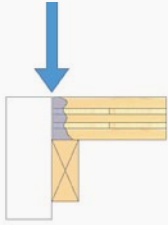
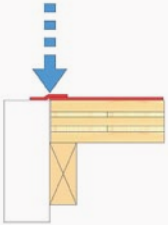
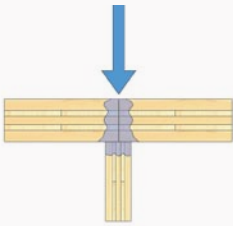
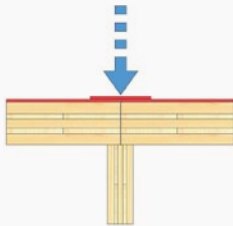
A1 + A2			
	Exposed end grain	Protected	Figure 17. Covered attic
A3			
	Exposed end grain	Protected	Figure 18. Covered window with KLH Protect

Openings

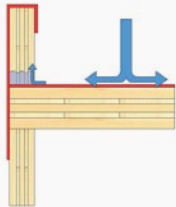
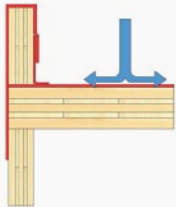
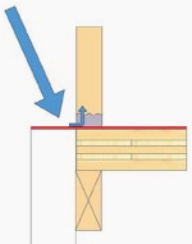
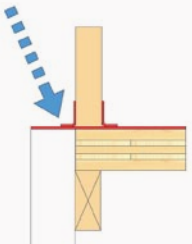
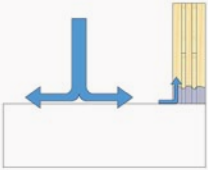
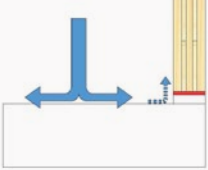
B1			
	Small opening	Possible drainage	Figure 19. Shaft openings used for temporary drainage
B2			
	Big opening	Walkable cover	Figure 20. Walkable cover with sealed edge

PROTECTION DURING THE CONSTRUCTION PHASE

Joints

C1			
	Exposed joint	Protected	Figure 21. Joint to adjacent concrete sealed with tape
C2			
	Exposed joint	Protected	Figure 22. Joint between KLH Protect, sealed with tape

Horizontal elements

D1			
	Exposed end grain	Protected	Figure 23. Fully closed roof area with first protection layer
D2			
	Exposed column end grain	Protected	Figure 24. Column base covered with tape
D3			
	Exposed wall end grain	Raised wall protected	Figure 25. Raised wall base with tape sealing

PROTECTION DURING THE CONSTRUCTION PHASE

DRAINAGE SYSTEMS

On horizontal surfaces, puddle formation is quite likely after a rain event. Without proper drainage, this can lead to high moisture ingress.

- Temporary drainage systems are needed to remove water immediately.
- Controlled drainage can prevent water ingress to vulnerable parts.

OPENINGS

Most openings need to be covered for safety anyway. Keep in mind that a safety cover is not necessarily fit to prevent moisture ingress to vulnerable parts.

- Exposure of additional end grain that needs to be covered.
- Should be considered when planning the drainage route.

REMOVE STANDING WATER

Standing water can penetrate most temporary protection layers after a while. Without functioning drainage, this needs to be removed by hand immediately.

- Components without a slope must be freed from water accumulation.

END GRAIN PROTECTION

As noted before, an end grain absorbs water quite rapidly and can lead to visible stains. Especially on concrete elements, dirty water can be an issue.

- For walls, elevation, coating or covering are possible.
- For horizontal elements, covering is the best option.



Figure 26. Shaft openings used for temporary drainage



Figure 27. Temporary drainage for temporary drainage



Figure 28. Secured and covered openings during construction



Figure 29. Removal of standing water from horizontal elements

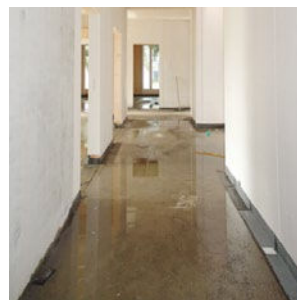


Figure 30. Elevated walls on concrete foundation



Figure 31. Exposed wall end grain on concrete foundation

WATERPROOFING AND MONITORING

05 WATERPROOFING AND MONITORING

WATERPROOFING

When waterproofing, it is important to test:

The underlying (wood) moisture

- Permanent waterproofing will not support any drying after installation, and the trapped moisture can lead to long-term problems in the supporting structure.

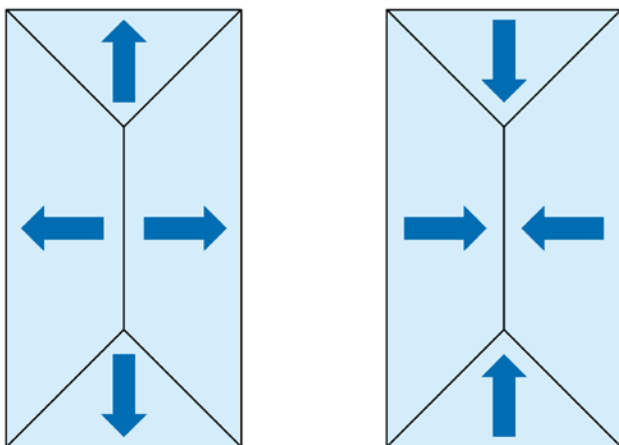
For leakage

- A lot of damage is related to faulty connections or damage that occurred during construction. A leakage test can help to detect that before closing the construction.

NO STANDING WATER

Maintain a minimal slope:

- A minimum of 2% is recommended.
- The deflection should be considered when planning the slope and drainage direction.
- The drainage system must follow the slope to work properly.

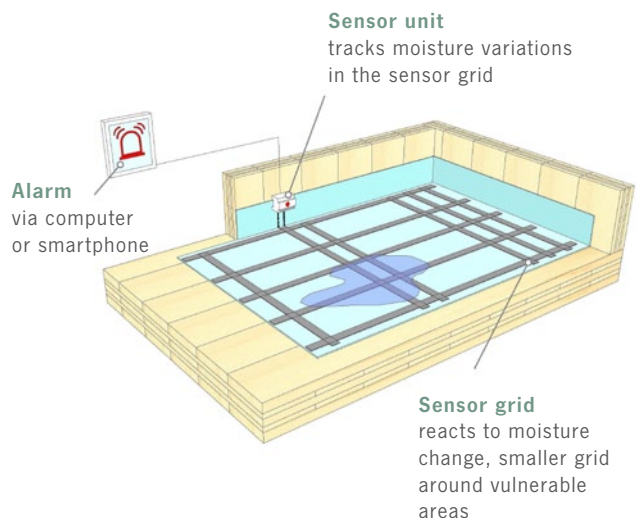


Possible drainage with ridge formation, e.g. due to sloped insulation

DRAINAGE

Recognisable drainage, also in the event of water ingress below the primary waterproofing.

- Maintainable/checkable parts (drains, joints, connections, etc.)
- Emergency drainage, decoupled from the regular drainage system
- Secondary layer that leads to a visible outlet (e.g. façade, shaft, weep hole)



MONITORING

There are passive and active monitoring options.

- Used primarily for flat roofs and wet rooms
- Passive monitoring, e.g. via weep holes, is low in cost and easy to maintain
- Active monitoring via sensors is becoming more necessary (faster response, remote monitoring)
- Possible utilisation during the construction phase, early detection (e.g. weekends or holidays)

RISKS OF MOISTURE INGRESS

06 RISKS OF MOISTURE INGRESS

Besides the long-term structural damage that high wood moisture can cause, there is a risk of stains and discolouration on the surface even after a single, brief occurrence of water ingress.

Surfaces with visual coatings are especially sensitive to water stains.

There are no perfect solutions for removing stains and discolouration!

High moisture ingress can lead to:

- Deformation
(particularly relevant for millings)
- Increased moisture during installation
- Fungal infestation
- Long-term damage to the structure
- Corrosion and embrittlement of screws

Time is crucial here; the list of effects is shown from fastest to slowest.

To prevent any of the above listed long-term issues, the wood moisture needs to be below 18%.

If additional drying is possible after the construction is finished, < 20% is acceptable. Slight deformations in the edge area may remain even after re-drying.



Figure 32. Unprotected window end grain

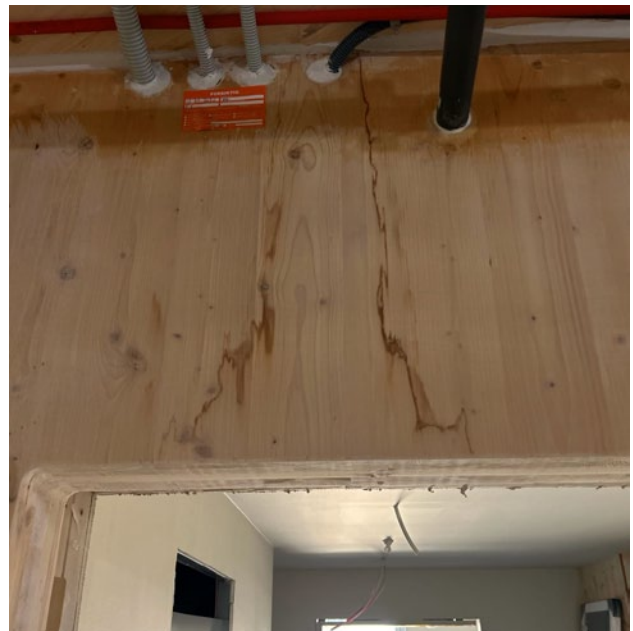


Figure 33. Water stains on a coated surface



Figure 34. Wood moisture measurement

07 MEASURES IN THE EVENT OF MOISTURE INGRESS

FAST REACTION!

As mentioned before, time is crucial and fast removal of water should prevent all damage that affects the structural integrity.

- Remove water quickly
- Drying to below 18% wood moisture
- Cleaning, sanding
- Replacement if necessary

Note:

Be aware of subsequent introduction of moisture through screed, fill or TCC installation.

Cleaning can be difficult as the stains can vary depending on the water and level of contamination. It is advised to try the chosen cleaning method on a non-crucial part to evaluate the outcome.

Possible cleaning methods:

- Washing with water, soap or soda
- Washing with wood care products or stain removers
- Sanding



Figure 35. Measuring after water damage



Figure 36. Drying equipment

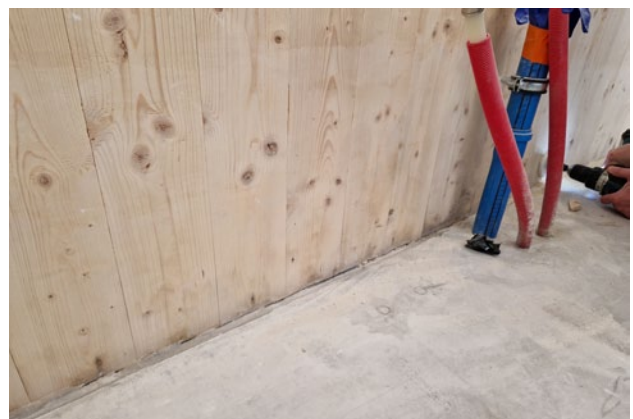


Figure 37. Sanded wall element after water ingress

ADDITIONAL LITERATURE AND RESOURCES

08 ADDITIONAL LITERATURE AND RESOURCES

KLH® Brochures

<https://www.klh.at/en/booklets/>

<https://www.klh.at/en/approvals-certificates/>

Publications on Timber Construction

<https://informationsdienst-holz.de/publikationen>

Cross-Laminated Timber (CLT) Information Sheet

<https://informationsdienst-holz.de/publikationen/brettsperrholz-merkblatt>

Moisture Management – Weather Protection During the Construction Phase

<https://informationsdienst-holz.de/publikationen/feuchtemanagement-witterungsschutz-in-der-bauphase>

Flat Roofs in Timber Construction

<https://informationsdienst-holz.de/publikationen/2-informationsdienst-holz-holzbau-handbuch/reihe-3-bauphysik/flachdaecher-in-holzbauweise>

Guideline for plinth connections in timber construction

Drying After Water Damage in Timber Construction

Guidelines for the renovation of flood-damaged wooden buildings

<https://www.holzforschung.at/en/knowledge-transfer/shop-downloads/>

Moisture risk management strategies for Mass Timber Buildings

<https://www.rdh.com/resource/moisture-risk-management-strategies-for-mass-timber-buildings-v3/>

IMAGE REFERENCES

09 IMAGE REFERENCES

- Figure 1. Packages, WoodTek Co., Ltd., 2025, Taiwan
- Figure 2. Floor panel lifting, KLH, 2025, Netherlands
- Figure 3. Open package during loading, KLH, 2025
- Figure 4. Closed package ready for transport, KLH, 2025
- Figure 5. Truck ready for unloading, KLH, 2025, Netherlands
- Figure 6. Ordered wrapping for smaller packages, KLH
- Figure 7. Package storage on site, WoodTek Co., Ltd., 2025, Taiwan
- Figures 8. to 10. Container loading types, KLH
- Figure 11. Stack of panels in the loading hall, KLH
- Figure 12. Discolouration due to direct sunlight (UV), KLH
- Figure 13. KLH Protect at construction site, KLH, 2025, Netherlands
- Figure 14. KLH Protect at KLH production facilities
- Figure 15. Temporary roof scaffolding, Informationsdienst Holz, 2024, Feuchtemanagement in der Bauphase, Berlin
- Figure 16. Protected construction site, KLH, 2025, Slovenia
- Figure 17. Example A1+A2, Attica, RDH Building Science, 2022, Moisture Risk Management Strategies for Mass Timber Buildings
- Figure 18. Example A3, Opening, Element ehf., 2025, Iceland
- Figure 19. Example B1, Drainage, RDH Building Science, 2022, Moisture Risk Management Strategies for Mass Timber Buildings
- Figure 20. Example B2, Cover, RDH Building Science, 2022, Moisture Risk Management Strategies for Mass Timber Buildings
- Figure 21. Example C1, Connection to concrete, KLH, 2020, Austria
- Figure 22. Example C2, Joint between two elements, KLH, 2025, Netherlands
- Figure 23. Example D1, Raised waterproofing, KLH, 2025, Germany
- Figure 24. Example D2, Column protection, KLH, 2025, Slovenia
- Figure 25. Example D3, Raised wall, KLH, 2015, Austria
- Figure 26. Drainage 1, Informationsdienst Holz, 2024, Feuchtemanagement in der Bauphase, Berlin
- Figure 27. Drainage 2, RDH Building Science, 2022, Moisture Risk Management Strategies for Mass Timber Buildings
- Figure 28. Openings, Studiengemeinschaft Holzleimbau e. V., 2025, Merkblatt Feuchteschutz von Holzmassiv- und Skelettbauten in der Bauphase, Wuppertal
- Figure 29. Standing water removal, RDH Building Science, 2022, Moisture Risk Management Strategies for Mass Timber Buildings
- Figure 30. End grain protection 1, Studiengemeinschaft Holzleimbau e. V., 2025, Merkblatt Feuchteschutz von Holzmassiv- und Skelettbauten in der Bauphase, Wuppertal
- Figure 31. End grain protection 2, Element ehf., 2024, Iceland
- Figure 32. Unprotected window end grain, Element ehf., 2024, Iceland
- Figure 33. Water stains on a coated surface, Massivtre AS, Norway
- Figure 34. Wood moisture measurement, Massivtre AS, Norway
- Figure 35. Measuring after water damage, Holzforschung Austria, 2021, Richtlinie Trocknung nach Wasserschäden im Holzhausbau, Wien
- Figure 36. Drying equipment, Holzforschung Austria, 2016, Leitfaden Sanierung von Hochwassergeschädigten Holzhausbauten, Wien
- Figure 37. Sanded element after water ingress, Element ehf., 2024, Iceland



KLH MASSIVHOLZ GMBH

Gewerbestraße 4 | 8842 Teufenbach-Katsch | Austria

Tel +43 (0)3588 8835 | Fax +43 (0)3588 8835 415

office@klh.at | www.klh.at